 


## Joining rail alignment fixture

 
 
The joining rail alignment fixture AT / AK is used during installation of joined rails in order to precisely align the rails with each other. Joining rail alignment fixture AT for joined T-and U-rails. Joining rail alignment fixture AK for K-rails.




## General Data

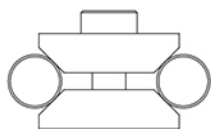

Alignment Fixture AT  
for T- and U-rails

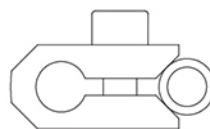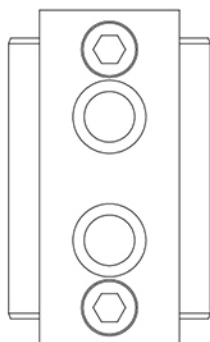

Alignment Fixture AK  
for K-rail

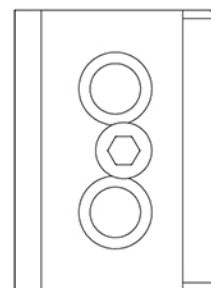 

Designation	Size	Compatible with
AT18	18	T- and U-rails
AT28	28	T- and U-rails
AT43	43	T- and U-rails
AT63	63	T- and U-rails
AK43	43	K-rail
AK63	63	K-rail